# Installation Guide

7-inch Series Product

Version: 1.0

### 1. About the Device Installation

Please refer to the following recommendations for installation.

## **Installation Environment**



INSTALL INDOORS ONLY



AVOID INSTALLATION NEAR GLASS WINDOWS




AVOID DIRECT SUNLIGHT AND EXPOSURE




AVOID USE OF ANY HEAT SOURCE NEAR THE DEVICE

#### Install on the wall

- ① Attach the mounting template sticker to the wall, and drill holes according to the mounting paper.
- ② Fix the backplate on the wall with the wall mounting screws.
- 3 After passing the wires through the wiring hole and connecting them to the device, and then snap the device onto the backplate and push it down into place.
- 4 Fasten the device to the backplate with a security screw.

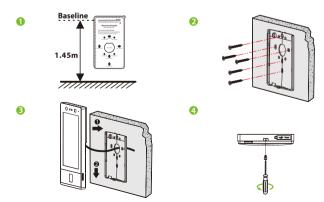


## 2. Terminal Block

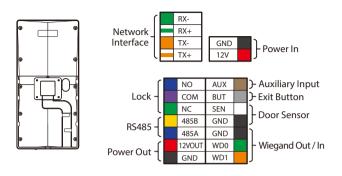

## 3. Ethernet Connection


Establish the connection between the device and the software using an Ethernet cable. An illustrative example is provided below:

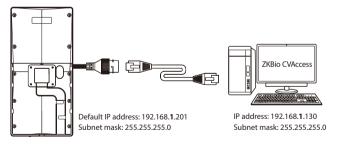


Tap on  $\equiv$  to enter the main menu. And then click on [Comm.] > [Ethernet] > [IP Address] to input the IP address.

**Note:** In LAN, IP addresses of the server (PC) and the device must be in the same network segment when connecting to the software.


## 4. Power Connection

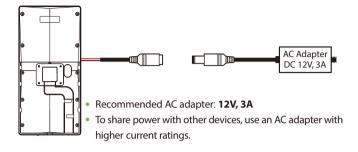

## 5. Exit Button, Door Sensor & Auxiliary Connection

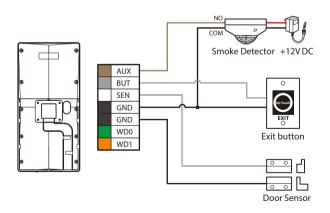


## 6. RS485 Connection

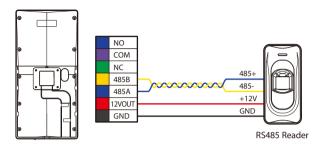

## 7. Lock Relay Connection


The system supports both **Normally Opened Lock** and **Normally Closed Lock**. The **NO LOCK** (normally opened at power on) is connected with '**NO**' and '**COM**' terminals, and the **NC LOCK** (normally closed at power on) is connected with '**NC**' and '**COM**' terminals. Take NC Lock as an example below:

1) Device not sharing power with the lock

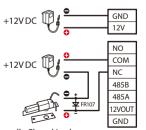


Normally Closed Lock

2) Device sharing power with the lock

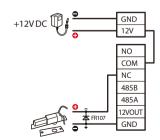

Normally Closed Lock

## 8. Wiegand Reader Connection

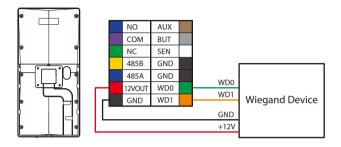

**Note:** The Wiegand interface is shared, and the user can choose to use either the Wiegand input or Wiegand output function to interface with different Wiegand devices.

## 9. Download Center

Scan the QR Code to download the **User Manual**, **Installation Guide** and **Quick Start Guide**.



